

DRUM SEQUENCER v1.037

FEATURES:

CV TRACK SLIDE. In CV track note edit menu press two step keys next to each other to enable slide from the left step to the right step. To remove note slide repeat the same procedure. Small "s" symbol at the length setting indicates that the slide is on.

GATE TIE. In CV track note edit page scroll the ENC 2 on the length setting until you reach the TIE setting. The gate will be high until next note trigger is reached.

SECOND CONFIG PAGE. To access it press SHIFT + PLAY two times while sequencer is stopped.

RESET OUT. Now you can configure the 16th trigger to work as reset out. It will send out a trigger signal when the sequencer will be stopped. To enable it go to the master settings page 2 and set RST to ON.

BAR AUTO COPY. If you extend 1 bar sequence to example to 2 or 4 bars the first bar is automatically copied to the new bars. To enable this go to the second config page and set the CPY to AUT. Works by track and pattern.

ADD TRIGS ON STEP EVENTS PAGE. Now you can add or remove triggers on the STEP EVENTS page. To do so press SHIFT + STEP KEY on the STEP EVENTS page.

FILL MODE. To access FILL mode press SHIFT + STEP/TAP key while in TAP mode.

BUGS/FIXES:

FILL MODE. To access FILL mode press SHIFT + STEP/TAP key while in TAP mode.

More accurate master BPM calculation.

External clock in bug fix (Now works perfectly as a slave to PNW).

Fixed accent out bug in TAP mode when the sequencer was stopped.

Fixed trigger length dropping while in FILL mode.

Improved gate length stability for the CV track.