



DRUM SEQUENCER

V1.043

FEATURES:

CV SLIDE. In CV track note edit menu press two step keys next to each other to enable slide from the left step to the right step. To remove note slide repeat the same procedure. Small "s" symbol at the length setting indicates that the slide is on.

GATE TIE. In CV track note edit page scroll the ENC 2 on the length setting until you reach the TIE setting. The gate will be high until next note trigger is reached.

ADD TRIGS ON STEP EVENTS PAGE. Now you can add or remove triggers on the STEP EVENTS page. To do so press

SHIFT + STEP KEY of the trigger you want to turn on/off in the STEP EVENTS page.

SONG MODE. To enter SONG WRITE press SHIFT + BANK once, to enter SONG PLAY press SHIFT + BANK twice.

In SONG WRITE to preview the pattern press ENC2 while on PTR setting. To save a song press ENTER/REC.

SECOND CONFIG PAGE. To access it press SHIFT + PLAY two times while sequencer is stopped.

RESET OUT. Now you can configure the 16th trigger to work as reset out. It will send out a trigger signal when the sequencer will be stopped. To enable it go to the master settings page 2 and set RST to ON.

BAR AUTO COPY. If you extend 1 bar sequence to example to 2 or 4 bars the first bar is automatically copied to the new bars. To enable this go to the second config page and set the CPY to AUT. Works by track and pattern.

ACCENT OUT VOLTAGE SETTING. In config 2nd page you can now set accent level for each of the accent out separately. When cursor is on AC1 select the channel you want to adjust with the regarding step key and then set the out level (5v or 10v) with ENC2.